

KONUSPRO-AS 34

Instructions



EN

KONUSPRO-AS 34 RIFLESCOPE INSTRUCTIONS

FOCUSING

While holding the scope about three or four inches (5 or 9 cm) from your eye, quickly glance through the eyepiece at a featureless, flatly lit bright area such as a wall or open sky. Turn the zoom ring to bring the magnifications from 2 to 6.

Use the dial on the eyepiece to adjust the dioptres..

MOUNTING:

Unscrew the two screws on the side of the instrument (1), set the rail onto the base, align and seat the crossbolt of the ring into the cross cut grooves of the base. Tighten each crossbolt with a screwdriver.

CAUTION: VIEWING THE SUN CAN CAUSE SERIOUS EYE INJURY, NEVER LOOK AT THE SUN WITH THIS PRODUCT OR EVEN THE NAKED EYE.

ALIGNMENT:

To bore sight, remove the bolt from bolt action guns, open other types. Rest the rifle on a steady support and remove the windage and elevation caps (fig. 2). Look through the bore, from the breech (for actions other than bolt, you will need a small mirror positioned in the ejection port and tilted so you can see through the bore) at a 50 yard (50 metres). Move the butt stock to centre the target in the bore. Without disturbing the rifle, adjust windage and

elevation screws to center

the reticle on target. To raise the point of impact, turn the elevation screw counterclockwise. To shift left, turn windage screw clockwise. If large amounts of windage and elevation adjustments are needed to bore sight, make about half of the required elevation change, then about half of the windage. Finish by applying the balance of elevation correction and then windage. Those who have regulating rings for the drift angle can make all necessary changes and then complete the operation by means of the system incorporated in the riflescope.

USE OF TURRETS

The turrets have an up/down release system. To unlock pull them up. Perform the reticle calibration and press them down to return in locked position.

CAUTION: BE SURE GUN IS NOT LOADED.


USE SAFE GUN HANDLING PROCEDURES AT ALL TIMES.

ZEROING:

DANGER: If you used a bore sighting collimator or any other bore obstructing device, remove it before proceeding. If the barrel has been drilled for a mount, check that screws do not protrude into the bore. Do not fire live or even blank ammunition with an obstructed barrel. An obstruction can cause serious damage to the gun and possible personal injury to yourself and other nearby.

Set zoom models to highest power, parallax correctable models to 100 yards (91 metres) setting. From a steady rest position, fire three rounds at a 100 yards (91 metres) target. Observe bullet strike on the target and adjust windage and elevation screws as needed to correct aim.

NOTE: now the windage and elevation arrows give correct indication for the aiming. Each click moves the impact point of the bullet.

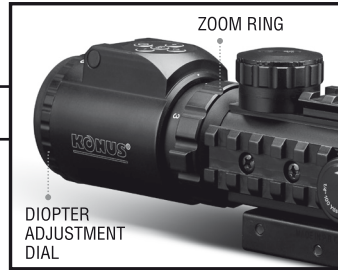

When you have finalized zeroing, replace windage and elevation caps.


CAUTION: ALL SHOOTING SHOULD BE DONE AT AN APPROVED RANGE OR OTHER SAFE AREA. EYE AND EAR PROTECTION IS RECOMMENDED.

RETICLE ACTIVATION AND LIGHTING

Insert in the battery holder compartment a CR2032 battery
Turn the battery holder turret (1) to ON.
Press the ON/OFF button (2) to light up or otherwise the level indicator.
Press the +/- buttons to increase or decrease the reticle lighting.
The C button changes the colour of the reticle switching between them.
The OFF button turns off both the level and reticle lighting.
When finished, turn the battery holder turret (1) to OFF position.

MIL-DOT RETICLE

Four dots evenly spaced on the four lines of a crosshair.
Measured from the center of each dot, they are 1 mil (milliradian) apart from one another. 1 mil equals 1" (2.5cm) @ 100 yards (m). Thus, using a standard Mil-Dot formula, these reticles provide highly accurate ranging to your target.

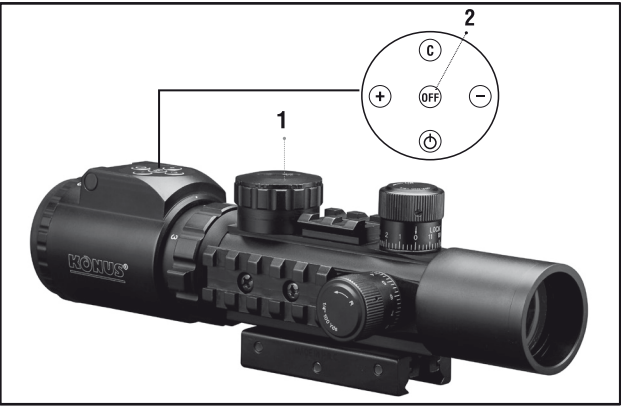

Mil-Dot reticles are particularly useful when shooting at moving targets or with a strong crosswind.

	M.O.A.*	MILS
A	34.38	10
B	17.19	5
C	3.44	1
D	63.03	18.3
E	0.69	0.2
F	63.03	18.3

* Minute of angle = 1" (2.5cm) at 100 yds.

MAINTENANCE OF THE RIFLESCOPE

Your riflescope is shockproof and waterproof. However you should never try to take it apart or clean it internally. If your scope ever does need repairs or adjustments, it should be returned to the authorized dealer. The exposed optical surface will perform their best if they are occasionally wiped clean with the lens cloth provided or with an optical uality lens paper like those for eyeglasses or camera lenses. Keep the protective lens covers in place when the scope is not being used. Maintain the metal surfaces of your riflescope by removing any dirt or sand with a soft brush so as to avoid schratching the finish. Wipe down the scope with a damp cloth and follow with a dry cloth. finally going over the tube with a silicone treated cloth will restore luster and protect the scope against corrosion. Be careful not to touch any of the lenses with the silicone cloth.

